



[www.DaystarWeb.com](http://www.DaystarWeb.com)  
Tech Support Contact Info  
[Tech@DaystarWeb.com](mailto:Tech@DaystarWeb.com)  
Phone: 623.907.0081  
Fax: 623.907.0088  
841 South 71<sup>st</sup> Avenue  
Phoenix, AZ 85043

## **KU70045 ATV WINCH ISOLATOR**

<b>Bill of Materials</b>
KU70045 Winch isolator x 1



1. Switch winch to Free Spool and remove cable from winch
2. Slide cable through slot on winch isolator, ensuring isolator is facing direction indicated in picture.
3. Attach the winch cable to the drum and load cable as explained by the manufacturer's owners manual. DO NOT allow cable to pull through the isolator.
4. Using the winch safety strap snug the winch hook into the isolator.
5. Isolator is designed to rest between the rollers. It does not attach to them.

### **Warranty note**

**Do not use the isolator as a winch guide.**

#### **Warranty:**

Four Real Steel Products carry a limited warranty: This Limited Warranty does not include normal wear and tear and is void if product shows any evidence of misuse, abuse, accident/collision, road hazard, improper installation and or maintenance or modification. This warranty does not cover cost of removal, installation, shipping or other incidental charges. This warranty is limited to the repair and/or replacement of the Four Real Steel Product only at the discretion of Four Real Steel Products, Inc. ALL WARRANTY ISSUES MUST BE ACCOMPANIED BY A SALES RECEIPT WITH TRANSPORTATION OR SHIPPING CHARGES PREPAID. This warranty extends only to the original purchaser of the Four Real Steel Products



Instruction Sheet P11292-00  
2007 Daystar Products International Inc.