



www.DaystarWeb.com
Tech Support Contact Info
Tech@DaystarWeb.com
Phone: 623.907.0081
Fax: 623.907.0088
841 South 71st Avenue
Phoenix, AZ 85043

**FJ Cruiser rear spacer lift.
Kit number KT09127.**



Instruction Sheet P11281
2007 Daystar Products International Inc.

Rear instructions sheet.


Rear Bill of Materials

<u>Part No</u>	<u>Description</u>	<u>Qty</u>
M03726	Spacer	2

1. Jack up the rear end and place jack stands under the frame allowing the rear suspension to move up and down freely.
2. Disconnect the sway bar and rear shocks at the axle and track bar so the axel will droop down.



3. Remove the coil spring , isolator and bump-stop.

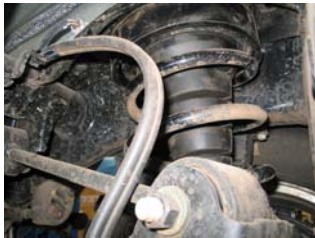

4. Put the stop bump-stop on the spacer and install the spacer , bump-stop and spring.



5. Jack up the rear suspension so the coil spring seats into the spring seat. Reconnect the lower shock and sway bar end , track bar and tires.
6. Jack up the rear of the vehicle and remove jack stands and place back on the ground.

WARNING

This vehicle has been modified to enhance its performance. The steering, braking and handling of this vehicle will differ from standard passenger cars and trucks, This vehicle handles differently from an ordinary vehicle in driving conditions which may occur on streets, highways and off road. Avoid unnecessary abrupt maneuvers, sudden stops, sharp turns and other driving conditions that could cause loss of control, possibly leading to a roll over or other accident that could result in serious injury or death to driver and passengers. If larger tires are installed the speedometer will read lower than the vehicles actual speed.

DRIVE WITH CARE, REDUCE SPEED AND WEAR SEAT BELTS AT ALL TIMES.

